


## WIRE HANGER

DELIGO

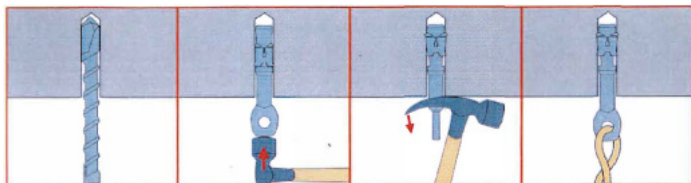

- 1 Drill a 6mm diameter hole to a depth of 45mm
- 2 Tap the wire hanger into the hole for 40mm. The eye should be standing proud enough to insert the tangs of a claw hammer under it
- 3 Pull the claw down to pull the hanger from the concrete by about 2-3mm. The hanger is now set
- 4 Attach the wire or strap through the eye

**Material:**

Steel

**Usage:**

Medium duty installation, expansion type

**Application:**

Suspended ceilings, catenary/suspension wire

**Substrate Applicable:**

Concrete, Stone and solid brickwork

Code	:	QPIWH660
Size	:	M6 X 60
Length	:	60mm
Pack Qty	:	20

UK  
CA CE

www.deligo.co.uk

